

## USER'S MANUAL

### LED Spot 30W Lighting



#### Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

#### Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

#### Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over  $\pm 10\%$  while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.

5.After power off,if it is need used again,please cool down over 20 minuter.

6.Please look round the manual for ensure the product can be used normally.

### DMX Channel Summary-9 Channels Mode

Channel	Value	Function
CH1	0-255	X axis rotation
CH2	0-255	Y axis rotation
CH3	0-255	Color disc and half color
CH4	0-255	Pattern plate and pattern bounce
CH5	0-250	Strobe
CH6	0-255	Bright bubble
CH7	0-255	Control the running speed of X.Y
CH8	61-150	Auto Run
	151-255	Sound Control
CH9	0-245	No pattern self walking
	245-255	reset

### DMX Channel Summary-11 Channels Mode

Channel	Value	Function
CH1	0-255	X axis rotation
CH2	0-255	X axis fine tuning
CH3	0-255	Y axis rotation
CH4	0-255	Y axis fine tuning
CH5	0-255	Color disc and half color
CH6	0-255	Pattern plate and pattern bounce
CH7	0-255	Strobe
CH8	0-255	Total dimming
CH9	0-255	XY-axis rotation adjustment
CH10	61-150	Auto Run
	151-255	Sound Control
CH11	0-245	No pattern self walking
	245-255	reset

## Display Control Instruction

A001	001- 512	DMX512 地址码设置 9-11 通道模式
CHnd	CH9	CH9 Channel setting
	CH11	CH11Channel setting
SLnd	NAST	Auto Run mode
	SL1	Auto Run mode1
	SL2	Auto Run mode2
SHnd	SH0	Effect mode0
	SH1	Effect mode1
	SH2	Effect mode2
	SH3	Effect mode3
SoUd	ON	Soundcontrol On
	OFF	Soundcontrol Off
SEns	0-99	Voice sensitivity control
bLAnd	bLAc	Auto run mode off
	Auto	No effect auto run mode
	SOun	No effect sound control mode
	HoLd	sound control off
LEd	OFF	LED Display ON/OFF
	ON	
d ISP	yes	display screen Up/Down
	ON	
rpAN	ON	X axial right operation
	yes	X axial left operation
r ti L	ON	Y axial post operation
	yes	Y axis running forward
REST	/	Reset

## Display Control Instruction

Welcome to use our light.The light uses energy-saving LED,long Product life,shockproof,dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects,easy to operate, suitable for all types of entertainment decoration,architectural lighting industry.

E

 
A:Function

B:Up

C:Down

D:Enter

E:LED Display



A

B

C

D

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

## Product Introduction

- \* Power Supply: AC90--275V, 50--60HZ
- \* Power consumption: 30W
- \* Fixing lamp: LED 30W
- \* DMX-Control-channels: 9/11 DMX Channels
- \* Shuttle: Flash rate: 0--10HZ
- \* Dimmer: 0-100% mechanic dimmer
- \* Long Lifespan LEDs (more than 60,000 hours)